




- ▶ **Customer programmable USB footswitch**
- ▶ **Emulates mouse and keyboard functions, up to 3 keys simultaneously**
- ▶ **Plug and Play technology, no additional drivers require**
- ▶ **2.5m cable**
- ▶ **Works with Windows™, Linux™ & Mac™**
- ▶ **USB 2.0 Protocol**

The Herga USB footswitch is programmed by the user to simulate up to three simultaneous keystrokes. No software installation is required as it will be recognised by the operating system once plugged into a USB socket. Programming is done simply by setting small switches inside the footswitch after having removed the cover (see pages 2 and 3).

Specifications	
Standards/approvals	USB HID Compliant (no software drivers required)
Power	5V @ 20 mA
Temperature range	10 60° C
Material	Moulded Glass filled nylon plastic construction
Rating	Sealed to IPX2
Weight	600 g


Dimensions

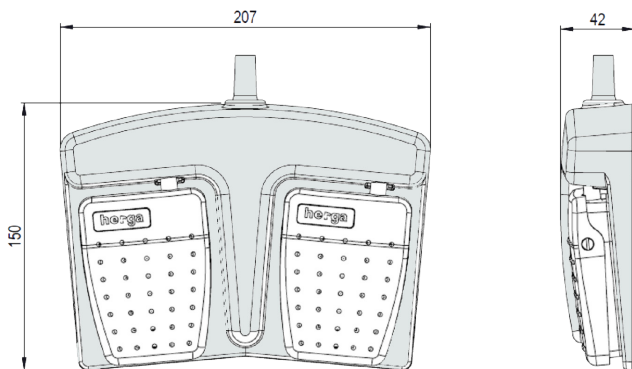

INSTALLATION INSTRUCTION FOR 6225 - 0020 USB FOOTSWITCH



Internal Switch Layout

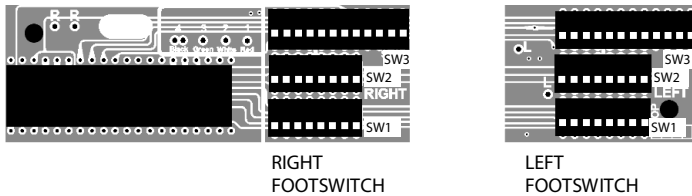

Before replacing the footswitch lid, test the required keystroke function. This is done by plugging the footswitch into an USB port on the PC and pressing each footswitch in turn.

Setting the footswitch function

Release the two hinge screws with a screwdriver turning them a quarter turn and removing them.

The lid will then come away revealing the switches.

Find the Key (or combination of keys) you require on the tables below and set SW2 or 3 accordingly for each of the LEFT and RIGHT footswitches. For test purposes each footswitch is supplied with the switches set to the character "a".

Key	SW2	SW3
A	3	2
B	6	1
C	5	3
D	3	4
E	1	4
F	3	5
G	4	5
H	4	6
I	1	7
J	3	6
K	3	7
L	3	8
M	5	6
N	6	2
O	1	8
P	2	3
Q	1	2
R	1	5
S	3	3
T	2	5
U	1	6
V	5	4
W	1	3
X	5	2
Y	2	6
Z	5	1

Key	SW2	SW3
ESC	4	2
°^	4	1
TAB	2	2
Caps Lock	9,4	7
Win	4	4
Space	9,4	1
/?	9,6	2
[{	9,2	4
]}	2	7
::;	9,3	4
~ #	9,1	3
.>	5	8
,<	5	7
- _	9,3	8
= +	9,4	6
\	7	2
Back space	9,2	2
' @	9,4	3
Enter	9,5	2

Key	SW2	SW3
F1	7	3
F2	7	4
F3	2	4
F4	4	8
F5	8	1
F6	4	7
F7	2	8
F8	7	8
F9	9,7	2
F10	9,8	2
F11	9,4	2
F12	9,6	1
F13	9,6	3
F14	9,6	4
F15	9,6	5
F16	9,7	3
F17	9,7	4
F18	9,7	5
F19	9,8	3
F20	9,8	4

Key	SW2	SW3
Num Lock	9,5	1
Num 1	9,3	1
Num 2	9,2	3
Num 3	9,3	5
Num 4	9,2	1
Num 5	9,1	5
Num 6	9,2	6
Num 7	9,1	6
Num 8	9,1	6
Num 9	9,3	3
Num 0	9,3	2
Num .	9,2	5
Num +	9,1	7
Num -	9,5	8
Num *	9,5	7
Num /	9,5	6
Num Enter	9,5	3



Setting the footswitch function

Key	SW2	SW3
CTRL	10	
ALT		10
SHIFT		9

Mouse	SW2	SW3
Left click	2	1
Right click	3	1
Middle click	4	3

Key	SW2	SW3
1 (!)	8	2
2 (")	8	3
3 (#)	8	4
4 (\$)	8	5
5 (%)	7	5
6 (^)	7	6
7 (&)	8	6
8 (*)	8	7
9 (())	7	1
0 ())	6	8

Key	SW2	SW3
Print Scrn	9,8	1
Scroll	9,1	4
Pause	9,4	5
Insert	9,2	8
Home	9,1	8
Page Up	9,3	6
Delete	9,7	1
End	9,2	7
Page Down	9,3	7

Key	SW2	SW3
↑	6	5
↓	6	7
→	6	4
←	6	3